For added protection against short liner length, upgrade to the

QUICK LOAD[™] Liner AutoLength[™] System!

Visit Tregaskiss.com/AutoLength for more information.

WIRE SIZE	FEEDER BRAND	AUTOLENGTH KIT** PART NUMBER	AUTOLENGTH PIN PART NUMBER	INTERCHANGEABLE WITH STANDARD POWER PIN	QUICK LOAD LINER
0.035" - 0.045"	MILLER®	214-81R	214-81	214-1	415-35-10Q
	TWECO®#4	214-80R	214-80	214	415-35-10Q
	TWECO #5	214-812R	214-812	214-12	415-35-10Q
	LINCOLN®	214-87R	214-87	214-7	415-35-10Q
	LINCOLN	214-818R	214-818	214-18	415-35-10Q
	LINCOLN	214-840R	214-840	214-40	415-35-10Q
	LINCOLN	214-843R	214-843	214-43	415-35-10Q
	PANASONIC®	214-814R	214-814	214-14	415-35-10Q
	PANASONIC	214-830R	214-830	214-30	415-35-10Q
	FRONIUS®	214-817R	214-817	214-17	415-35-10Q
	FRONIUS	214-841R	214-841	214-41	415-35-10Q
	EURO	N/A	425-820E	425-20	N/A
	L-TEC®	214-84R	214-84	214-4	415-35-10Q
	OTC DAIHEN®	214-839R	214-839	214-39	415-35-10Q
0.052" - 1/16"	MILLER	214-91R	214-91	214-1	415-116-10Q
	TWECO #4	214-90R	214-90	214	415-116-10Q
	TWECO #5	214-912R	214-912	214-12	415-116-10Q
	LINCOLN	214-97R	214-97	214-7	415-116-10Q
	LINCOLN	214-918R	214-918	214-18	415-116-10Q
	LINCOLN	214-940R	214-940	214-40	415-116-10Q
	LINCOLN	214-943R	214-943	214-43	415-116-10Q
	PANASONIC	214-914R	214-914	214-14	415-116-10Q
	PANASONIC	214-930R	214-930	214-30	415-116-10Q
	FRONIUS	214-917R	214-917	214-17	415-116-10Q
	FRONIUS	214-941R	214-941	214-41	415-116-10Q
	EURO	N/A	425-920E	425-20	N/A
	L-TEC	214-94R	214-94	214-4	415-116-10Q
	OTC DAIHEN	214-939R	214-939	214-39	415-116-10Q

**The AutoLength Kit is a limited time promotional offering that includes one AutoLength Pin and one bonus QUICK LOAD Liner.

Additional wire sizes may be available. Contact Tregaskiss Customer Service to inquire

FOR SEMI-AUTOMATIC APPLICATIONS INTERCHANGEABLE WITH STANDARD AUTOLENGTH QUICK LOAD AUTOLENGTH PIN PART NUMBER FEEDER BRAND WIRE SIZE KIT** PART NUMBER LINER INCLUDED POWER PIN IN KIT MILLER® 214-81SA 214-81 214-1 415-35-25Q MILLER 214-86SA 214-86 214-6-116 415-35-25Q TWECO® #4 214-80SA 214-80 214 415-35-25Q 214-12 TWECO #5 214-812SA 214-812 415-35-25Q LINCOLN® 214-82SA 214-82 214-2 415-35-25Q 0.035" - 0.045" PANASONIC® 214-814SA 214-814 214-14 415-35-25Q FRONIUS® 214-817SA 214-817 214-17 415-35-25Q 214-841SA 214-841 214-41 415-35-25Q FRONIUS EURO N/A 425-820 425-20 N/A L-TEC® 214-84SA 214-84 214-4 415-35-25Q MILLER 214-91SA 214-91 214-1 415-116-25Q MILLER 214-96SA 214-96 214-6-332 415-116-25Q TWECO #4 214-90SA 214-90 214 415-116-25Q TWECO #5 214-912SA 214-912 214-12 415-116-25Q LINCOLN 214-92SA 214-92 214-2 415-116-25Q 0.052" - 1/16" PANASONIC 214-914SA 214-914 214-14 415-116-25Q 415-116-25Q FRONIUS 214-917SA 214-917 214-17 FRONIUS 214-941SA 214-941 214-41 415-116-25Q FURO N/A 425-920 425-20 N/A 415-116-25Q L-TEC 214-94SA 214-94 214-4

**The AutoLength Kit is a limited time promotional offering that includes one AutoLength Pin and one bonus QUICK LOAD Liner

Additional wire sizes may be available. Contact Tregaskiss Customer Service to inquire


Tregaskiss Technical Insert INSTALLATION GUIDE FOR

QUICK LOAD™ LINER

UNER GAUGE

QUICK LORD" LINER

USE TO RIMUNER & CURNTEN

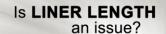

It doesn't have to be anymore.

RENOVE BEFORE SING LINER

Learn more about the **QUICK LOAD[™] Liner** AutoLength[™] System

Tregaskiss.com/AutoLength

Visit Tregaskiss.com/QUICKLOAD for more information

How to <u>INSTALL</u> QUICK LOAD[™] Liners When Replacing Conventional Liners

1. Remove the protective cap from the new QUICK LOAD Liner.



2. Install this liner from the back of the MIG gun with retainer attached (using the same procedure as installing a conventional liner). Future replacements will be done from the front. (Refer to How to REPLACE QUICK LOAD[™] Liners on the next panel.)



- **3. IMPORTANT!** Push liner back into neck and use the Liner Gauge provided to pinch and hold it in place. Use this Liner Gauge to trim liner as follows:
 - For 6-ft liner lengths and shorter: trim with a 1/2" (13 mm) stick out (BLUE Liner Gauge provided).
 - **For liner lengths longer than 6 feet:** trim with a 3/4" (20 mm) stick out (BLACK Liner Gauge provided).



- 4. Feed wire through the QUICK LOAD Liner.
- 5. Reinstall the consumables.

IDENTIFYING GUNS EQUIPPED WITH QUICK LOAD LINERS:

If you ordered a QUICK LOAD Liner to fit an existing gun, "QUICK LOAD[™] Liner Installed" is printed on the MIG gun tag and has been included to help operators identify guns that have QUICK LOAD Liner installed. Identification is recommended so operators know that future liner changes will be done from the front of the gun.

IMPORTANT NOTE: Liners trimmed too long or too short can cause serious wire feeding problems. Be sure to use your Liner Gauge as instructed to trim the liner to the correct stick out.

How to <u>REPLACE</u> QUICK LOAD[™] Liners Into Retainer or AutoLength[™] Pin

1. Remove consumables (nozzle, contact tip and retaining head).



- 2. Pull the existing QUICK LOAD Liner from the neck using pliers.
- 3. Remove the protective cap from the new QUICK LOAD Liner.



4. Insert the QUICK LOAD Liner through the neck using the wire as a guide. Push the QUICK LOAD Liner in using short strokes to prevent the wire from kinking.



5. WITH RETAINER:

Once the QUICK LOAD Liner stops feeding, give it an extra push to ensure it bottoms out and is inserted completely.

WITH QUICK LOAD LINER AUTOLENGTH SYSTEM:

Feed the liner into the gun until it bottoms out inside the AutoLength Pin.

IMPORTANT! Place the Liner Gauge onto the end of the QUICK LOAD Liner and press it flush with the end of the neck. Push the liner back into the neck and use the gauge provided to pinch and hold it in place. Trim the liner as follows:

- For 6-ft liner lengths and shorter: trim with a 1/2" (13 mm) stick out (BLUE Liner Gauge provided).
- For liner lengths longer than 6 feet: trim with a 3/4" (20 mm) stick out (BLACK Liner Gauge provided).



NOTE: With the QUICK LOAD Liner AutoLength System, the liner will spring back and stick out of the neck by 1-3/4" after trimming. This is normal. The liner will be pushed back into the neck when the consumables are installed.

6. Reinstall consumables.