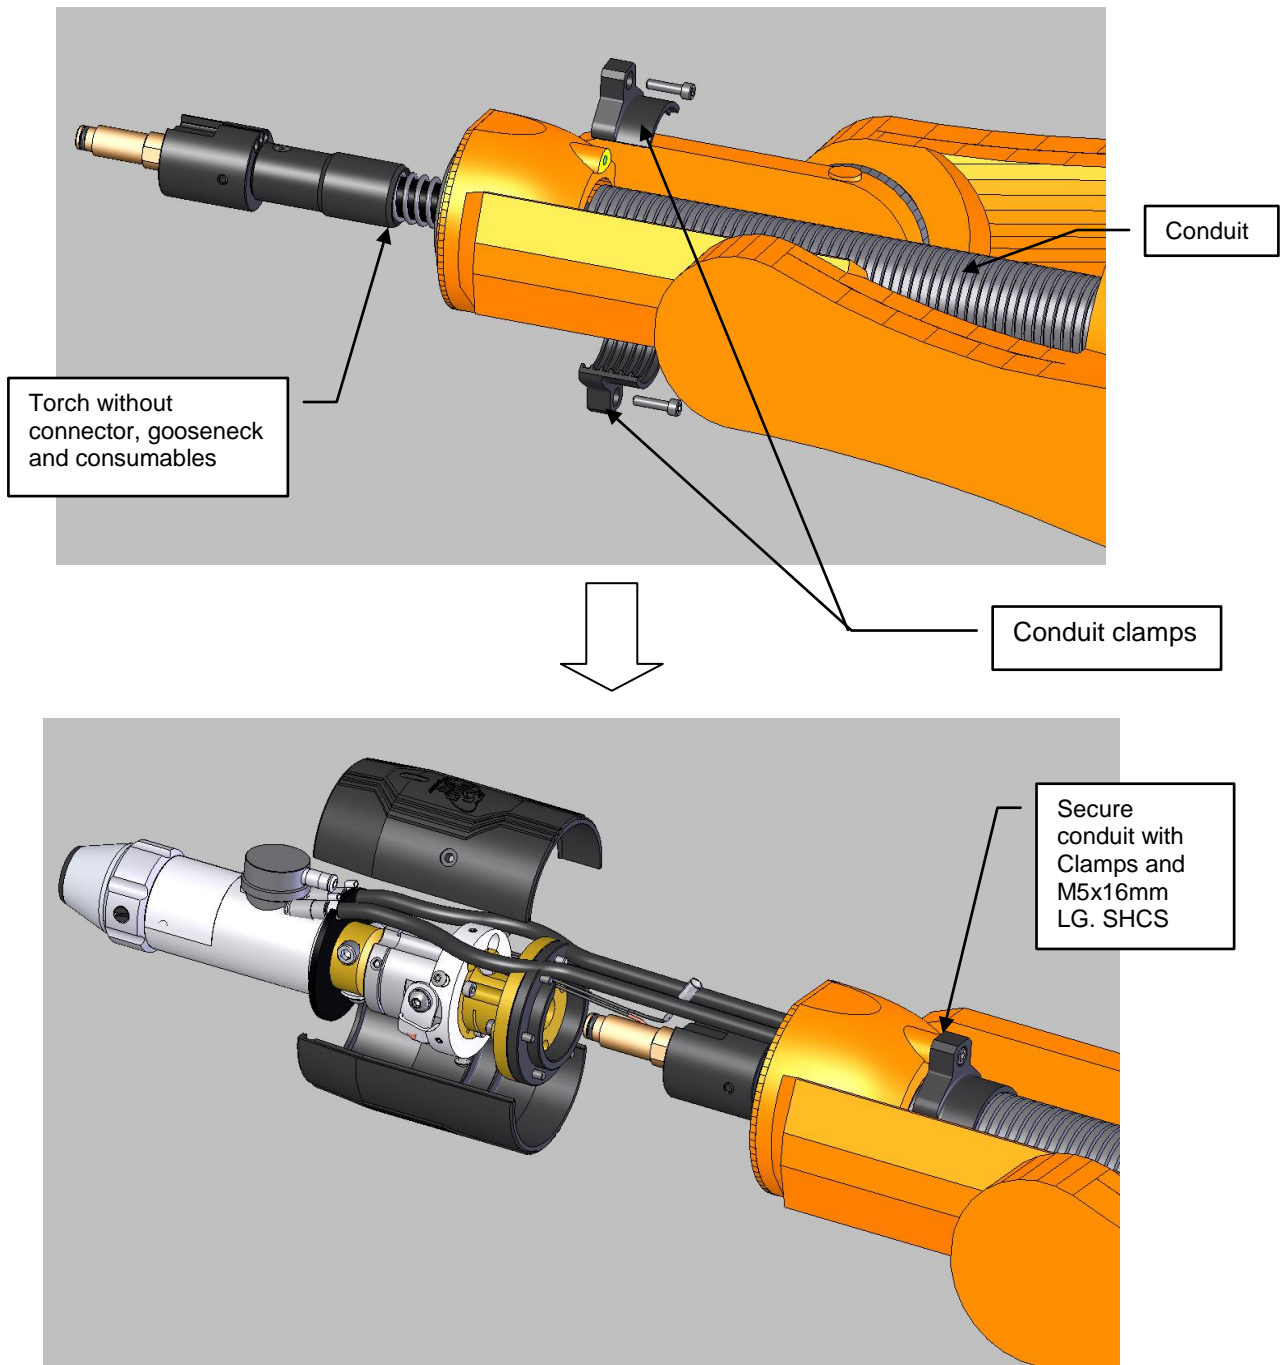


TOUGH GUN I.C.E.™ TORCH INSTALLATION - KUKA KR5 HW

1. Remove gooseneck, consumables & conduit from torch.
2. Slide torch through robot wrist and conduit.
3. Secure torch on robot wrist.
4. Secure conduit with two clamps and M5 SHCS.
5. Connect torch to feeder.
6. Install gooseneck, liner and consumables.