



TECHNICAL GUIDE

**For TOUGH GUN I.C.E.™
Robotic Quick-Change
MIG Guns**

- **SAFETY & WARRANTY INFORMATION**
- **INSTALLATION**
- **MAINTENANCE GUIDE**
- **TECHNICAL DATA**
- **OPTIONS**
- **EXPLODED VIEW & PARTS LIST**
- **TROUBLESHOOTING**
- **ORDERING INFORMATION**

Effective September 2010 –
**QUICK LOAD™ Liners Standard
on all TOUGH GUN™ Robotic MIG Guns**

*Certified ISO 9001:2008
Please read instructions prior to use.
Save this manual for future reference.*

TABLE OF CONTENTS

<i>THANK YOU</i>	2
<i>WARRANTY</i>	3
<i>GENERAL SAFETY</i>	3
<i>1.0 – INSTALLATION</i>	4
1.1 INSTALLING QUICK CONNECT BLOCK TO FEEDER	4
1.2 INSTALLING GUN TO QUICK CONNECT BLOCK.....	4
1.3 INSTALLING CLUTCH CABLE TO GUN.....	5
1.4 INSTALLING INTERFACE CABLE	5
1.5 INSTALLING TOUGH GUN™ MIG GUNS EQUIPPED WITH “DIRECT POWER PINS”	5
<i>2.0 – MAINTENANCE</i>	6
2.1 NOZZLE AND CONTACT TIP SYSTEMS.....	6
2.2 TOUGH GUN I.C.E. INSTALLATION AND NECK REPLACEMENT	6
2.3 CONVENTIONAL LINER REPLACEMENT	8
2.4 QUICK LOAD™ LINER INSTALLATION AND REPLACEMENT	8
2.5 POWER PIN REPLACEMENT.....	9
2.6 UNICABLE ASSEMBLY REPLACEMENT	9
2.7 WIRE BRAKE INSTALLATION.....	10
2.8 WIRE BRAKE LINER INSTALLATION	10
<i>3.0 – TECHNICAL DATA</i>	11
3.1 NECK DIMENSIONS.....	11
3.2 GUN AMPERAGE RATINGS.....	11
<i>4.0 – EXPLODED VIEW AND PARTS LIST</i>	12
<i>5.0 – COMPLETE ASSEMBLY OPTIONS</i>	14
<i>6.0 – WIRING DIAGRAM</i>	15
<i>7.0 – TROUBLESHOOTING</i>	16
<i>8.0 – NECK INSPECTION SPECIFICATIONS</i>	17
<i>9.0 – ORDERING INFORMATION</i>	18
9.1 EXAMPLE OF STANDARD MODEL NO. AND OPTIONS	18

THANK YOU...

For selecting a Tregaskiss TOUGH GUN™ Robotic Quick-Change MIG gun. Manufacturing operations demand extremely dependable robotic equipment. With this in mind, the TOUGH GUN MIG Gun was designed and engineered to be a reliable tool to support high production within a robotic cell. As the name implies, the TOUGH GUN MIG Gun is made from durable materials and components engineered to perform in a rugged welding environment. Your TOUGH GUN MIG Gun is completely assembled and ready to weld, and has undergone numerous quality checks to ensure high performance.

The instructions and illustrations in this technical guide make it easy for you to maintain your TOUGH GUN MIG Gun . **Please read, understand, and follow all safety procedures.** Keep this Technical Guide booklet as a handy reference when ordering complete guns, parts and special options. **For technical support and special applications, please call the Tregaskiss Technical Service Department at 1-877-737-3111 or fax 1-877-737-2111.** Our trained technicians are available between 8:30 AM and 5:00 PM, and will answer your application or repair questions.

Tregaskiss employees build TOUGH GUN MIG Guns for the world’s welding professionals. We are always striving to improve our products and services, and would appreciate receiving your suggestions or comments. Please contact us immediately if you experience any safety or operating problems.

WARRANTY

Product is warranted to be free from defects in material and workmanship for the period specified below after the sale by an authorized Buyer. Should there be a defect please refer to our Return Merchandise Policy.

PRODUCT	WARRANTY PERIOD
TOUGH GUN™ Robotic MIG Guns	180 days
TOUGH GUN Reamer	1 year
TOUGH GARD Spatter Cleaner	1 year
TOUGH GUN Robotic Peripherals (Clutch, Sprayer, Wire Cutter, Mounting Arms)	1 year
Low-Stress Robotic Unicables (LSR Unicables)	2 years

Tregaskiss reserves the right to repair, replace or refund the purchase price of non-conforming product. Product found not defective will be returned to the Buyer after notification by Customer Service.

Tregaskiss makes no other warranty of any kind, expressed or implied, including, but not limited to the warranties of merchantability or fitness for any purpose. Tregaskiss shall not be liable under any circumstances to Buyer, or to any person who shall purchase from Buyer, for damages of any kind. Including, but not limited to any, direct, indirect incidental or consequential damages or loss of production or loss of profits resulting from any cause whatsoever, including, but not limited to, any delay, act, error or omission of Tregaskiss.

Genuine Tregaskiss parts must be used for safety and performance reasons or the warranty becomes invalid. Warranty shall not apply if accident, abuse, or misuse damages a product, or if a product is modified in any way except by authorized Tregaskiss personnel.

GENERAL SAFETY

Before installation or operation of TOUGH GUN MIG Guns, please read the safety precautions listed below.

1. Do not touch live electrical parts. The following should be checked to prevent electrical shock.
 - a. Faulty or damaged equipment is repaired or replaced.
 - b. Equipment is off when not in use.
2. Ensure that all safety devices, guards, shields or barriers are properly in place and connected correctly before allowing operation of the equipment.
3. CSA Standard W117.2 CODE FOR SAFETY IN WELDING AND CUTTING obtainable from the Canadian Standards Association, Standards Sales, 178 Rexdale Boulevard, Rexdale, Ontario, Canada M9W 1R3.
4. ANSI Standard Z49.1 CODE FOR SAFETY IN WELDING AND CUTTING obtainable from the American National Standards Institute, 1430 Broadway, New York, NY 10018.

CALIFORNIA PROPOSITION 65 WARNING

This product, when used for welding or cutting, produces fumes or gases which contain chemicals known to the State of California to cause birth defects and, in some cases, cancer.

This product contains chemicals, including lead, known to the State of California to cause cancer, and birth defects or other reproductive harm. *Wash hands after use.*

(California Health & Safety Code Section 25249.5 at seq.)




1.0 – INSTALLATION

1.1 INSTALLING QUICK CONNECT BLOCK TO FEEDER


STEP #1

- Insert the correct feeder adaptor liner for desired wire diameter (2 provided) flush with the threaded end of the feeder adaptor.
- Tighten set screw.
- Thread feeder adaptor into Quick Connect block and tighten.

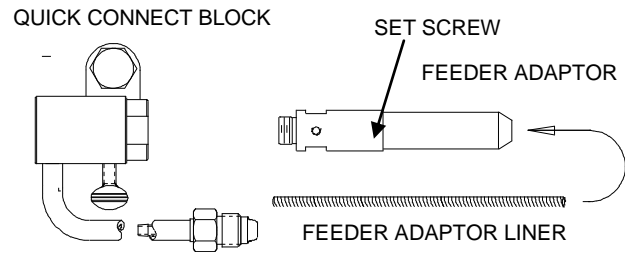

STEP #2


- Position assembly into feeder adaptor and trim liner within 1/16" (1.6 mm) of the drive rolls and remove burrs if necessary.
- Secure assembly into feeder.
- Thread gas hose nipple into feeder gas fitting.
- Connect power cable to 1/2" (13 mm) power bolt with appropriate lug.
- **Tighten all connections.**
- Feed welding wire through assembly by hand and tighten drive rolls.

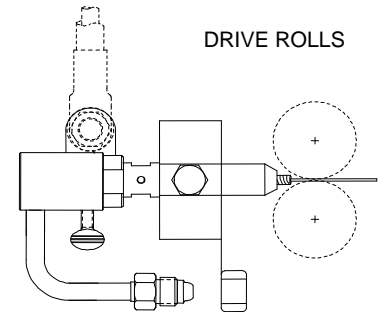

1.2 INSTALLING GUN TO QUICK CONNECT BLOCK


NOTE: Ensure correct liner and contact tip are utilized. Examine and replace power pin o-rings if necessary.

STEP #1

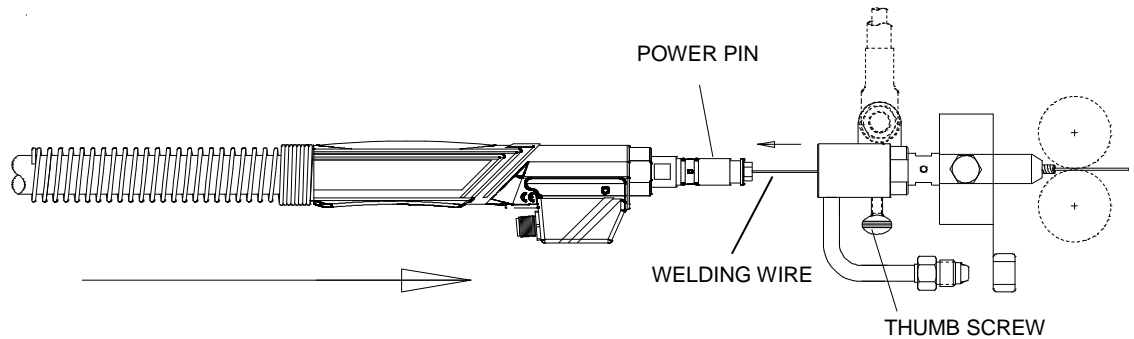

- Guide welding wire into power pin.
- Insert power pin to shoulder.
- Tighten thumb screw securely.


STEP #2

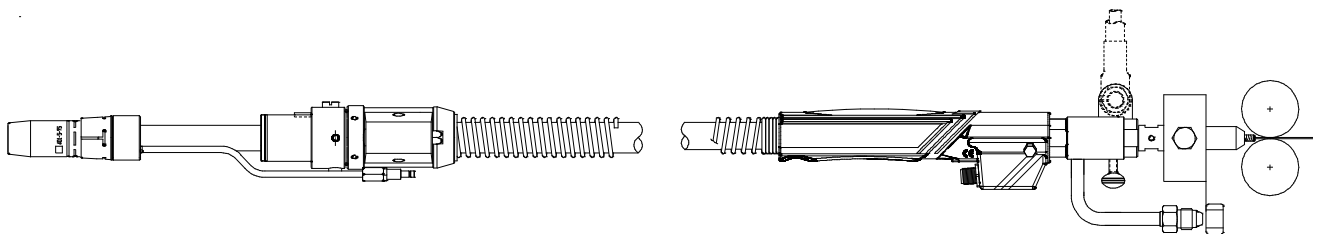


- With gun mounted on robot (see below "Installing Gun to Gun Mount Arm"), feed wire through gun. It may be necessary to remove contact tip when feeding small wire sizes.
- Recheck the following: proper gas flow, drive roll pressure, voltage and wire feed speed.

1.3 INSTALLING CLUTCH CABLE TO GUN

- Install orange jumper cable (12" / .3 m) supplied with the robotic safety clutch to the switch connection at the clutch.
- Install the other end of the jumper cable to the connector on the gun housing.

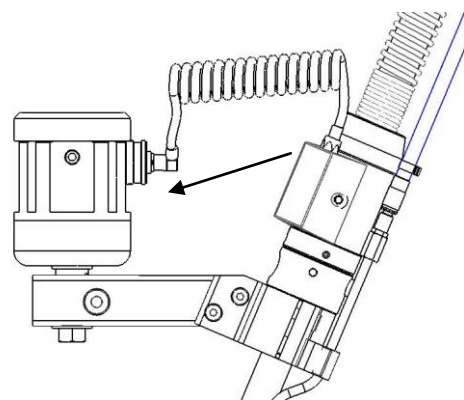

1.4 INSTALLING INTERFACE CABLE

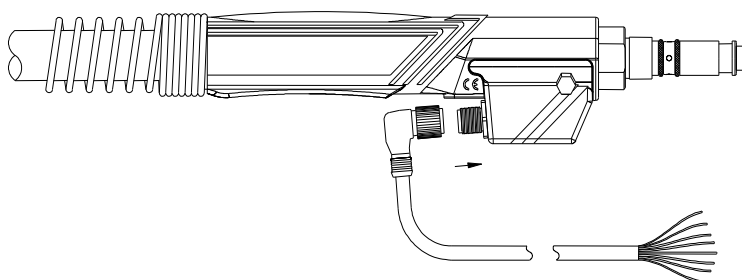


- The 550 amp TOUGH GUN I.C.E.™ Robotic Gun is supplied with a 15' (5 m) control cable with a bare end. Plug the control cable into the rear housing of the gun.
- If using the bare-ended control cable, see **Section 6.0 – WIRING DIAGRAM** for proper lead connections.
 - If using a control cable with a connector, plug connector into the proper receptacle (See **Section 6.0 – WIRING DIAGRAM** for control cable listing).

1.5 INSTALLING TOUGH GUN™ MIG GUNS EQUIPPED WITH “DIRECT POWER PINS”

IMPORTANT: The thread-in two-piece power pin incorporates a taper to seat and lock in the power pin to the rear handle block. Make sure power pin is tightened in the block with a wrench to insure pin is secure and will not come loose.

NOTE: The rear handle and screws do not have to be removed when installing the two-piece power pins.


- Thread power pin into the rear handle block.
- Tighten the power pin into the rear block using a 3/4" (19 mm) wrench on the rear block and a 5/8" (16 mm) wrench on the power pin.
- Install liner (See **Section 2.3 / 2.4 LINER REPLACEMENT**).
- Install gun to feeder (See below).
- **Miller® Power Pin and Lincoln® Power Pin**
 - Insert power pin to shoulder and secure.
 - Insert control plug to control housing of gun.
 - Insert control plug into feeder.
 - Feed welding wire into power pin by hand and tighten drive rolls.
 - On Lincoln® it is necessary to connect gas hose to barbed fitting on power pin.
- **ESAB® Power Pin (Non Euro Style)**
 - Insert power pin to shoulder and secure.
 - Feed welding wire into power pin by hand and tighten.

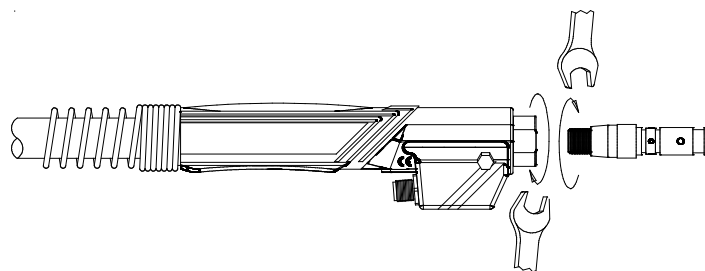


- **Bernard® Style and Euro-Connector**
 - Feed welding wire through female adaptor by hand and tighten drive rolls.
 - Guide welding wire into connector on gun, carefully insert connector into female adaptor and tighten Euro handnut or Bernard® style locking collar.
- **Tweco® #5 Power Pin**
 - Reference pg. 4 “Installing Gun to Quick Connect Block”.
- **Hobart®**
 - Reference “Tweco® #5 Power Pin”.

2.0 – MAINTENANCE


2.1 NOZZLE AND CONTACT TIP SYSTEMS

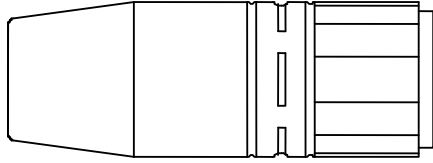

HEAVY DUTY NOZZLE
VARIOUS SIZES



HEAVY DUTY TOUGH LOCK
CONTACT TIP



HEAVY DUTY TOUGH LOCK
RETAINING HEAD

IMPORTANT:

- Neck insulator **MUST** be in place before welding to properly insulate neck armor.
- Check all parts to ensure that connections are tight before welding.
- The retaining head **MUST** be tightened with a 5/8" (16 mm) wrench to prevent the contact tip from overheating.
- **DO NOT** use pliers to remove or tighten the retaining head or scoring may result.

Removal and Replacement

Nozzle

- Pull slip-on nozzles off with a twisting motion.
- When installing the nozzle, ensure that it is fully seated.

Contact Tip

- Thread the contact tip into the retaining head.
- Torque to 30 in.-lbs. (3.5 Nm).
- The Tregaskiss Tip Tool (Part # 450-18 – for heavy-duty tips) or a pair of weld pliers are the optimal tools for contact tip installation.


Retaining Head

- Thread retaining head onto neck with a 5/8" (16 mm) wrench.
- Torque to 80 in.-lbs. (9 Nm).
- **DO NOT** use pliers to remove or tighten the heavy duty retaining head or scoring may result.

2.2 TOUGH GUN I.C.E. INSTALLATION AND NECK REPLACEMENT


STEP #1

- Remove front end consumables.
- Disconnect both water lines at quick connect couplers.

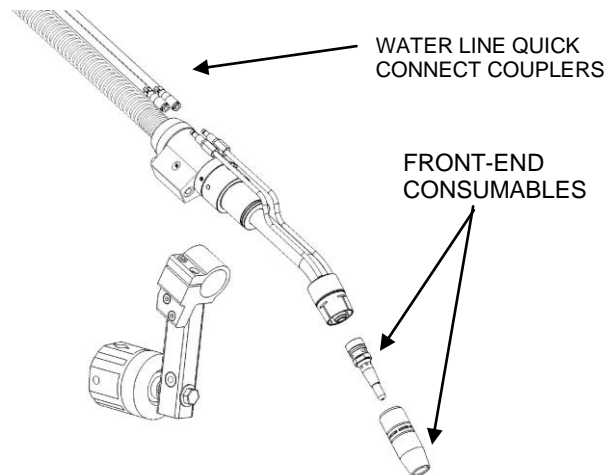


STEP #2

- Loosen neck bolt with a 5mm Allen key.
- Remove TOUGH GUN I.C.E. / Neck Assembly.

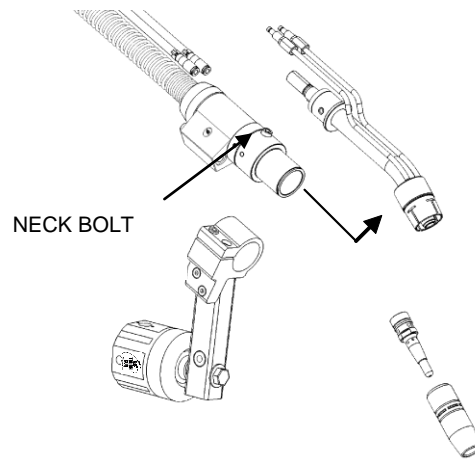


STEP #3

- Insert the connector housing of new torch into the mounting arm.
- **NOTE:** If existing clamping device on arm has 2 bolts, remove only the front bolt and snug the rear bolt
- Reinstall TOUGH GUN I.C.E. / Neck Assembly
- Tighten neck bolt (5 mm Allen key) to torque specification (60 in.-lbs or 7 Nm).

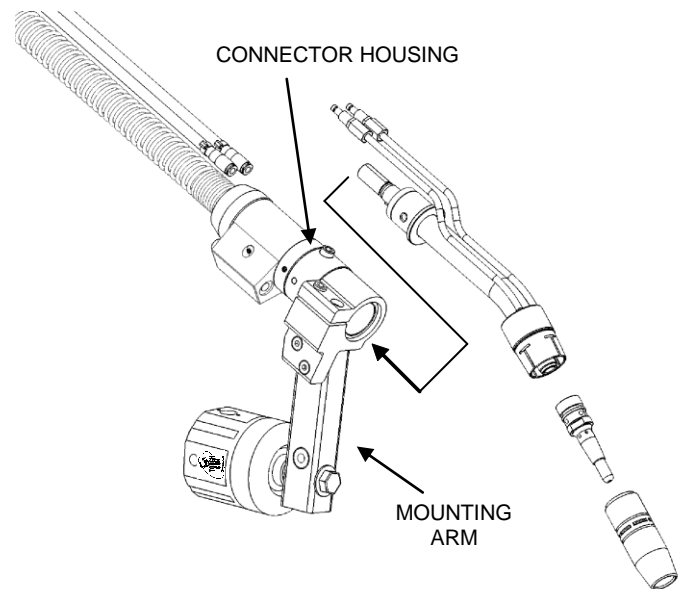


STEP #4

- Reinstall front end consumables.
- Connect water lines with quick connect couplers
- Fasten water line bracket with bolt (bracket and bolt included with TOUGH GUN I.C.E. assy).
- **NOTE** ☆ Ensure both bolts are tightened on the mounting arm clamp.
- Place leather wrap around uncable and water lines.

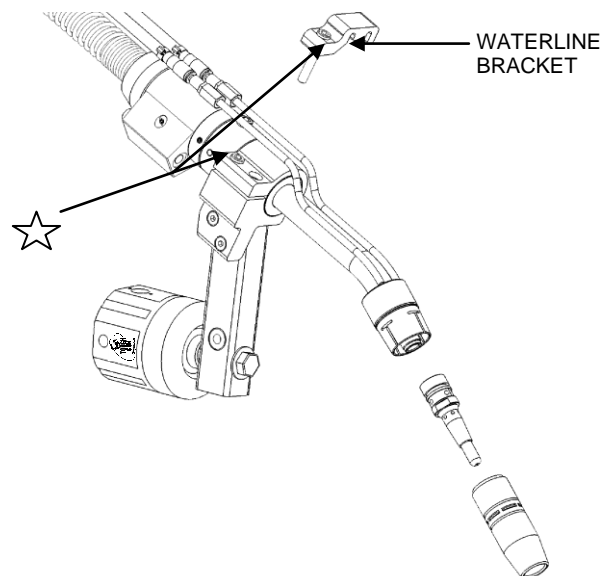

2.3 CONVENTIONAL LINER REPLACEMENT


STEP #1

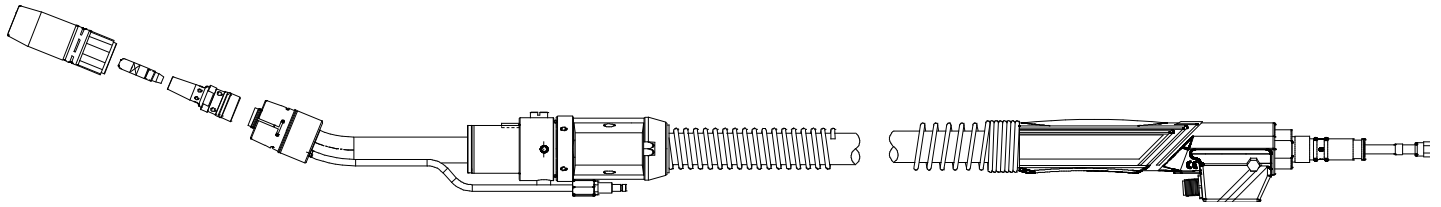

- **NOTE:** Ensure power supply is off and gun is removed from feeder before proceeding.
- Remove nozzle, tip and gas diffuser.
- If power pin uses a liner set screw, loosen the set screw using a 5/64" Allen wrench.
- If power pin is thread-in liner type, using a 10 mm wrench, turn thread-in liner counterclockwise until liner is free from the power pin.
- With gun straightened, grip liner with pliers and remove.


STEP #2

- Feed replacement liner through gun using short strokes to avoid kinking. Twist liner clockwise if necessary.
- If power pin uses a liner set screw:
 - Seat liner retainer with o-ring to shoulder inside bore of power pin.
 - Secure by tightening liner set screw. Do not over tighten.
- If power pin is thread-in type:
 - Using a 10 mm wrench, turn thread-in liner in a clockwise direction and tighten in power pin.



STEP #3



- Push liner back into gun and hold in place.
- Trim conduit liner to a 3/4" (19 mm) stick out.
- Remove any burr that may obstruct wire feed, especially on flat wire type liner.
- Replace nozzle, tip and gas diffuser onto neck.

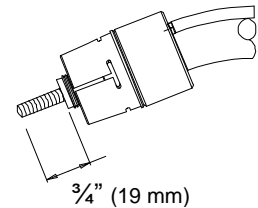

2.4 QUICK LOAD™ LINER INSTALLATION AND REPLACEMENT



Initial installation – When replacing conventional liner with QUICK LOAD Liner

- Install the QUICK LOAD Liner from the back of the torch with the retainer attached (using the same procedure as installing a conventional liner). Future replacements will be done from the front.
- Push liner back into gun and hold in place. (Using liner gauge, trim liner to a 3/4" stick out).
- Feed wire through liner.
- Reinstall consumables.

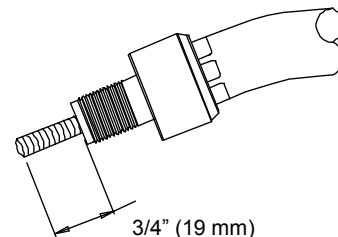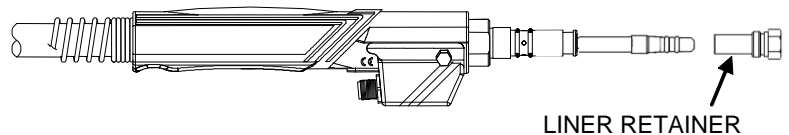

Replacement of QUICK LOAD Liner


- Remove consumables (nozzle, contact tip and retaining head).
- Remove existing QUICK LOAD Liner.
- Using the welding wire as a guide, insert the new QUICK LOAD Liner through the neck (short strokes will prevent liner from kinking).
- Once liner stops feeding, give it an extra push to ensure it is inserted completely.
- Push liner back into gun and hold in place. Using liner gauge, trim conduit liner to a 3/4" stick out.
- **HELPFUL HINT:** Before cutting liner make a mark and pull it back out past the end of the welding wire and then cut it and push the liner back into place securely. This will help with feeding the wire through the contact tip afterwards.
- Reinstall consumables.

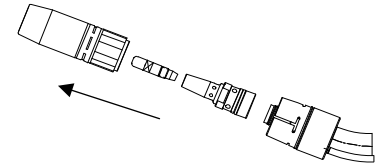

2.5 POWER PIN REPLACEMENT

STEP #1


- Remove liner from gun (See **Section 2.3 / 2.4 LINER REPLACEMENT**).
- Unthread power pin and remove using 1" wrench on the power pin block and a 5/8 or 3/4" wrench on power pin.
- Repeat procedure in reverse order to install replacement power pin.

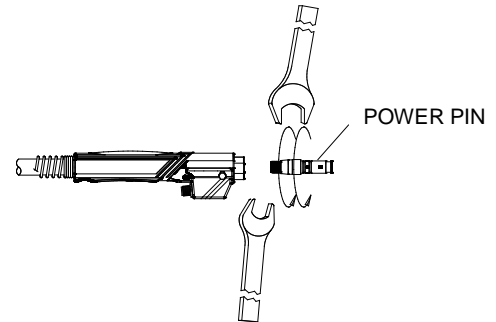

2.6 UNICABLE ASSEMBLY REPLACEMENT


STEP #1

- Loosen 2 screws on the gun mount arm with a 5 mm Allen wrench and remove water line bracket.
- Remove neck from gun (See **Section 2.2 NECK REPLACEMENT**).
- Remove liner (See **Section 2.3 / 2.4 LINER REPLACEMENT**).
- Remove power pin and rear housing from gun (See **Section 2.5 POWER PIN REPLACEMENT**).

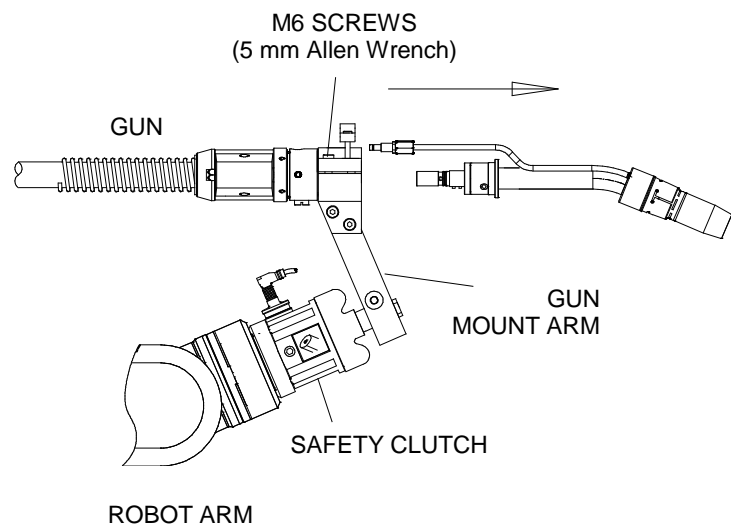

NOTE: All of the steps listed below have been covered in previous sections of the manual. Please refer to these sections for further clarification.

STEP #2

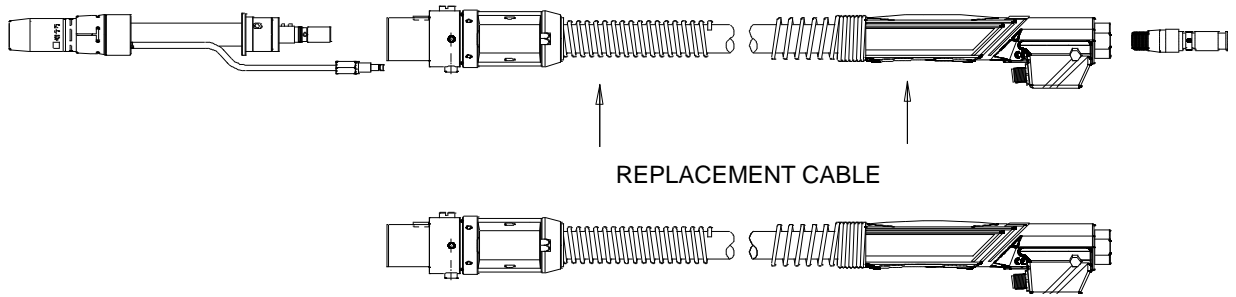

- Remove the neck, liner and power pin from the gun assembly.
- If using the air blast option remove the air fitting and hose from the old unicable.
- Remove the black plug in the front gun housing of the new cable and reinstall the air fitting and hose if using the air blast option.
- Reinstall the power pin on the new cable.
- Reinstall the liner and neck.

NOTE: On older 500 amp robotic gun systems if you do not want to take advantage of the jog or internal clutch cable features you can utilize your existing clutch cable configuration. To upgrade to the internal clutch cable/Jog feature you will need to order the jog button and a control cable.


519-1 Control Cable – 6' (2 m) with bare ends
519-3 Control Cable – 78" Motoman

519-2 Control Cable – 15" (5 m) bare ends
519-4 Control Cable – 18" Motoman

2.7 WIRE BRAKE INSTALLATION

To Reassemble Wire Guide Holder:


- Line up wire brake tool with wire guide holder as shown.
- Slide holder back inside connector cone.
- Screw in wire brake pushing unit.
- Connect 499-9-15 air tube to air supply (70-80 psi).

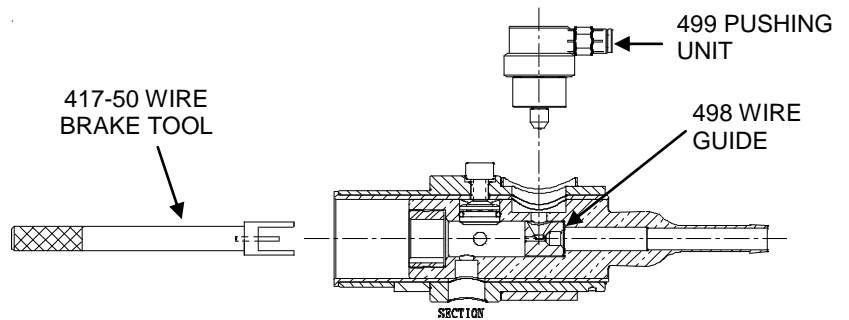

2.8 WIRE BRAKE LINER INSTALLATION


STEP #1

- Insert new liner from back of torch, liner will bottom out on wire guide.
- Measure distance from back of power pin to hex on the liner (take note).
- Remove liner and cut measured length off front of liner.
- Reinsert liner.

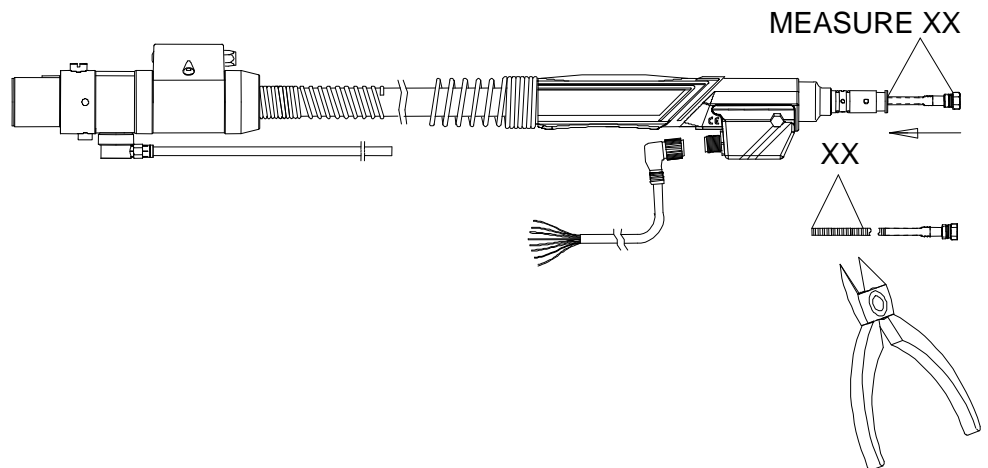


STEP #2

- Install new jump liner into neck, reinstall neck back onto torch.
- Push back on jump liner to make sure that it has seated properly against wire guide.
- Cut so that 1/2" of liner is sticking out of the neck.
- Reinstall consumables.

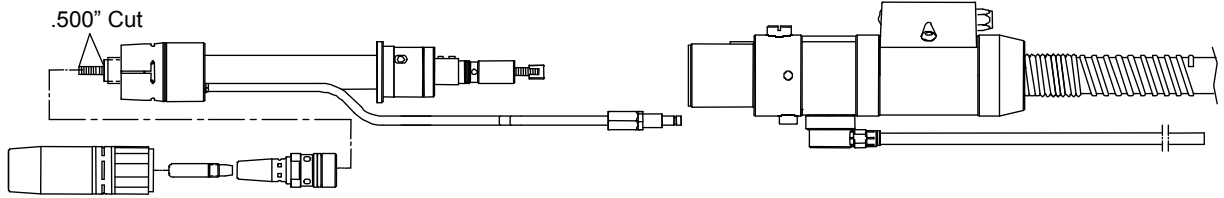

3.0 – TECHNICAL DATA

3.1 NECK DIMENSIONS

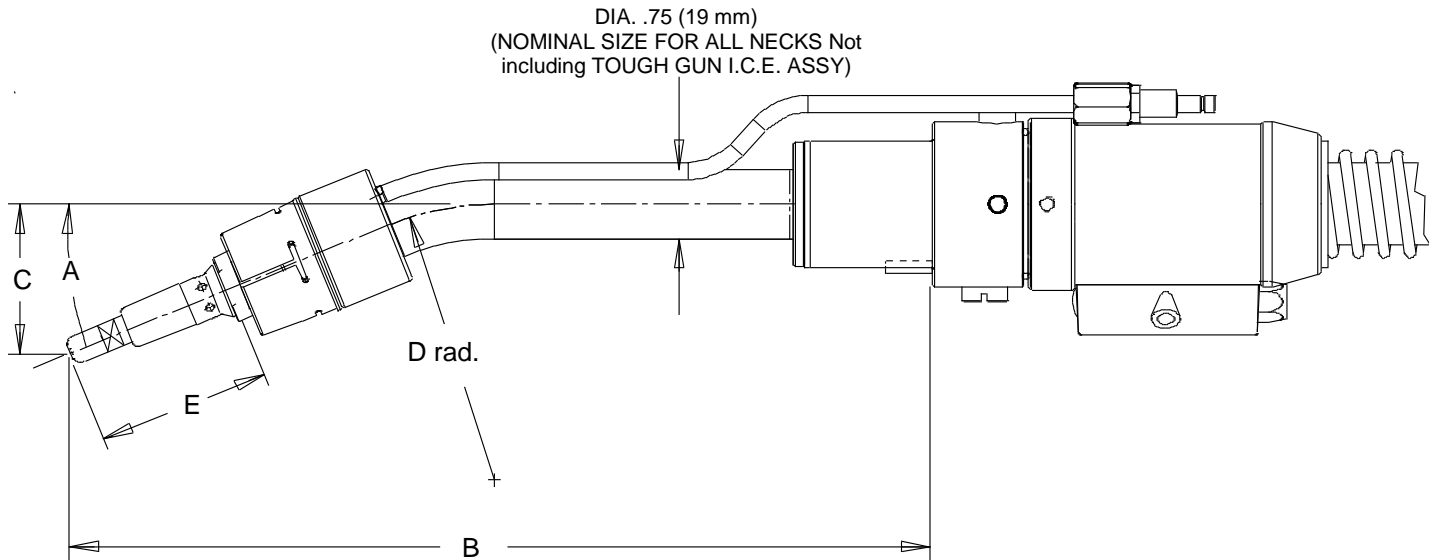


NECK	ANGLE	B	C	D	E
590-22-XXXX	22°	9.355" (237.6 mm)	1.623" (41.2 mm)	3.00" (76.2 mm)	1.874" (47.6 mm)
590-45-XXXX	45°	7.607" (193.6 mm)	3.530" (89.7 mm)	3.00" (76.2 mm)	1.874" (47.6 mm)
590-180-XXXX	180°	8.816" (223.9 mm)	--	--	1.874" (47.6 mm)

3.2 GUN AMPERAGE RATINGS

GUN MODEL	60% DUTY CYCLE - MIXED GASES OR 100% DUTY CYCLE - CO ₂
TOUGH GUN I.C.E.™ MODEL	550 amp


NOTE: Ratings are based on tests that comply with IEC 60974-7 standards.

4.0 – EXPLODED VIEW AND PARTS LIST

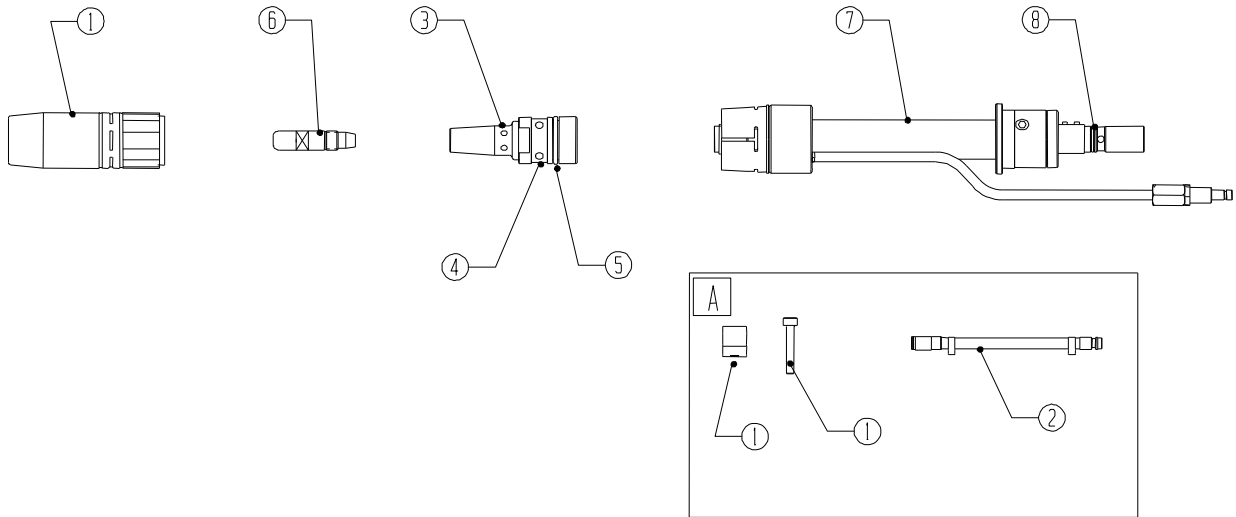

ITEM	PART #	DESCRIPTION
1	STANDARD NOZZLES (SELF-INSULATED)	
	401-4-62	5/8" (16 mm) BORE - 1/8" (3 mm) TIP RECESS - O.D. 0.938 "
	401-4-75	3/4" (19 mm) BORE - 1/8" (3 mm) TIP RECESS - O.D. 0.938"
	SHORT ARC NOZZLE	
	401-8-62	1/8" (3 mm) TIP STICK OUT - O.D. 0.938"
	401-81-62	1/8" (3 mm) TIP STICK OUT - O.D. 1.062"
	HEAVY DUTY NOZZLES (SELF-INSULATED)	
	401-5-62	5/8" (16 mm) BORE - 1/4" (6 mm) TIP RECESS - O.D 1.062"
	401-5-75	3/4" (19 mm) BORE - 1/4" (6 mm) TIP RECESS - O.D 1.062"
	401-6-50	1/2" (13 mm) BORE - 1/8" (3 mm) TIP RECESS - O.D 1.062"
	401-6-62	5/8" (16 mm) BORE - 1/8" (3 mm) TIP RECESS - O.D 1.062"
	401-6-75	3/4" (19 mm) BORE - 1/8" (3 mm) TIP RECESS - O.D 1.062"
	401-7-62	5/8" (16 mm) BORE - 1/4" (6 mm) TIP REC. (BRASS) - O.D 1.106"
	401-7-87	7/8" (22 mm) BORE - 1/4" (6 mm) TIP REC. (BRASS) - O.D 1.106"
	401-42-50	1/2" BORE - 1/8" TIP RECESS - BOTTLENECK* - O.D. 0.938 "
	401-48-50	1/2" BORE - 1/8" TIP STICKOUT - BOTTLENECK* - O.D. 0.938"
	401-48-62	5/8" BORE - FLUSH TIP - BOTTLENECK* - O.D 1.062"
	401-71-62	5/8" - 1/8" TIP RECESS (BRASS)* - O.D 1.062"
	401-81-62	5/8" BORE - 1/8" TIP STICKOUT - O.D 1.062"
	401-87-62	5/8" BORE - 1/8" TIP STICKOUT (BRASS) - O.D 1.062"
		*NOTE: STRAIGHT INSIDE BORE NOZZLES
2	408-200-9A	AIR BLAST PLUG
3	404-32	RETAINING HEAD - TOUGH LOCK™
4	454-1-2	RETAINING RING ONLY
5	402-16	O-RING ONLY
6	TOUGH LOCK™ CONTACT TIPS	
	403-20-30	FOR .030" (0.8 mm) WIRE
	403-20-35	FOR .035" (0.9 mm) WIRE
	403-20-1.0	FOR 1 mm WIRE
	403-20-45	FOR .045" (1.2 mm) WIRE
	403-20-52	FOR .052" (1.3 mm) WIRE
	403-20-116	FOR 1/16" (1.6 mm) WIRE
	403-20-564	FOR 5/64" (2.0 mm) WIRE
	403-20-332	FOR 3/32" (2.4 mm) WIRE
	403-20-364	FOR 3/64" ALUM. (1.2 mm)
	403-20-1.4	FOR 1.4 mm WIRE
	TOUGH LOCK TAPERED CONTACT TIPS	
	403-21-30	FOR .030 (.8 mm) WIRE
	403-21-35	FOR .035 (.9 mm) WIRE
403-21-1.0	FOR 1 mm WIRE	
403-21-45	FOR .045 (1.2 mm) WIRE	


ITEM	PART #	DESCRIPTION	
7	NECKS		
	590-22-XXXX	22 DEGREE (XXXX = NOZZLE O.D. SEE NOZZLES)	
	590-45-XXXX	45 DEGREE (XXXX = NOZZLE O.D. SEE NOZZLES)	
	590-180-XXXX	STRAIGHT (XXXX = NOZZLE O.D. SEE NOZZLES)	
	NECKS - WIRE BRAKE		
	590W-22-XXXX	22 DEGREE (XXXX = NOZZLE O.D. SEE NOZZLES)	
	590W-45-XXXX	45 DEGREE (XXXX = NOZZLE O.D. SEE NOZZLES)	
	590W-180-XXXX	STRAIGHT (XXXX = NOZZLE O.D. SEE NOZZLES)	
8	405-1QC	O-RING	
9	UNICABLE ASSEMBLY (COMPLETE WITH REAR HANDLE)		
	513-204	4' (1.2 m) SERVICE - 500 AMP	
	513-204.5	4.5' (1.4 m) SERVICE - 500 AMP	
	513-205	5' (1.5 m) SERVICE - 500 AMP	
	513-206	6' (1.8 m) SERVICE - 500 AMP	
	513-208	8' (2.4 m) SERVICE - 500 AMP	
	513-210	10' (3.05 m) SERVICE - 500 AMP	
	UNICABLE ASSEMBLY - WIRE BRAKE		
	513-404	4' (1.2 m) SERVICE - 500 AMP	
	513-404.5	4.5' (1.4 m) SERVICE - 500 AMP	
513-4XX	XX = LENGTH - 500 AMP		
10	414	QUICK CONNECT POWER PIN (TWECO #4)	
	414-11-116	MILLER PIN - FOR .035" - 1/16" WIRE	
	414-11-332	MILLER 3/32	
	414-12	TWECO #5	
	414-16	LINCOLN	
	414-32	PANASONIC	
	414-33	LINCOLN (SHORT)	
	414-400	POWER PIN BLOCK	
	10A	214	TWECO
		214-2	LINCOLN
	10B	214-4	L-TEC MT SERIES
		214-6-116	MILLER 1/16
		214-6-332	MILLER 3/32
214-7		LINCOLN (SHORT)	
214-12		TWECO	
214-13		PANASONIC	
414-1		O-RING	
414-2		LINER SET SCREW	
414-11-2		O-RING FOR MILLER POWER PIN	
11		WIRE CONNECTORS (INCLUDED WITH 510-200-3)	
12		510-200-3	CONNECTOR TERMINAL ASSEMBLY

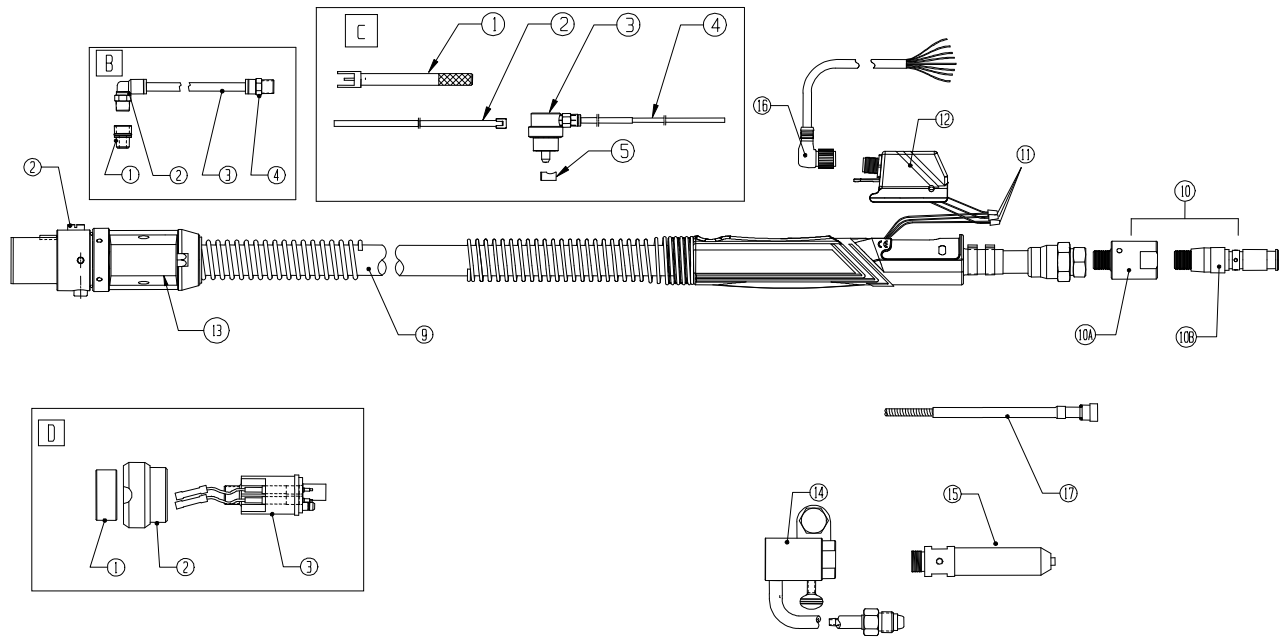

ITEM	PART #	DESCRIPTION
13	510-200-2	HOUSING - LESS JOG BUTTON
	510-200-2J	JOG HOUSING WITH JOG BUTTON
14	417	QUICK CONNECT BLOCK ASSEMBLY (TWECO #4)
	417-50	QUICK CONNECT BLOCK ASSEMBLY (EURO)
	417-60	QUICK CONNECT BLOCK ASSEMBLY (TWECO #5)
15		FEEDER ADAPTOR (TO BE USED WITH 417 (TWECO #4, 417-50 (EURO) & 417-60 (TWECO #5) QUICK CONNECT BLOCK)
	418-3	ESAB (NON EURO STYLE) & HOBART (BETA MIG)
	418-4	HOBART 27
	418-5	LINCOLN (LN-4, LN-5) & (SWM-31)
	418-6	LINCOLN (LN-7, LN-8, LN-9, LN-22, LN-24 SUITCASE)
	418-7	LINDE (SWM-14)
	418-8	LINDE (ALL MODELS EXCEPT SWM-14, 31, 32, L-TECH 35)
	418-9	MILLER (10A, 30A) (MILLERMATIC 35S FEEDER)
	418-10	MILLER (52E, 54E, 521, 522 SERIES & MILLERMATIC 200,250,& 60)
	418-14	OTC
	418-21	GILLILAND
	418-26	LINCOLN ADAPTOR (NA2)
	418-27	PANASONIC
	418-35	KOBELCO
16		CONTROL CABLES
	519-1	CONTROL CABLE - 6' (2 m)
	519-2	CONTROL CABLE - 15' (5 m)
	519-3	CONTROL CABLE - 78" MOTOMAN
	519-4	CONTROL CABLE - 18" MOTOMAN
	519-5	CONTROL CABLE - 13" MAGNA
	519-6	CONTROL CABLE - 24" FORD
	519-7	CONTROL CABLE - 30'(10 m) - SAME AS 519-2, ONLY LONGER
	519-8	CONTROL CABLE - 60' (20 m) - SAME AS 519-2, ONLY LONGER
	519-9	CONTROL CABLE - 18" ABB
	519-10	CONTROL CABLE - 24" TOWER
	519-11	CONTROL CABLE - 78" FANUC
519-12	CONTROL CABLE - 18" MOTOMAN (NO VOLTAGE SENSE)	

ITEM	PART #	DESCRIPTION	
17		CONDUIT LINERS	
	415-26	LINER RETAINER FOR QUICK LOAD™ LINER	
	415-35-6Q	QUICK LOAD LINER FOR .035" (0.9 mm) & .045" (1.2 mm) WIRE - 6' (1.8 m) - NOT AVAILABLE WITH WIRE BRAKE	
	415-116-6Q	QUICK LOAD LINER FOR .035" (0.9 mm) & .045" (1.2 mm) WIRE - 6' (1.8 m) - NOT AVAILABLE WITH WIRE BRAKE	
	415-35-6	FOR .035" (0.9 mm) & .045" (1.2 mm) WIRE - 6' (1.8 m)	
	415-35-10	FOR .035" (0.9 mm) & .045" (1.2 mm) WIRE - 10' (3.05 m)	
	415-35-2	FOR .035" (0.9 mm) & .045" (1.2 mm) ALUM. WIRE - 5' (1.5 m)	
	415-116-10	FOR .052" (1.3 mm) - 1/16" (1.6 mm) WIRE - 10' (3.05 m)	
	415-332-6	FOR .078" (1.9 mm) - 3/32" WIRE - 6' (1.8 m) - FLAT WOUND	
	415-332-153	FOR .078" (1.9 mm) - 3/32" WIRE - 15' (5 m) - ROUND WOUND	
A		TOUGH GUN I.C.E.™ OPTION	
	1	590-2	BRACKET ASSEMBLY (INCLUDES BOLT AND BRACKET)
2	590-4	WATER LINE ASSEMBLY	
NOT SHOWN	590-3-XX	LEATHER WRAP	
B		508-A AIR BLAST OPTION (INCLUDES ITEMS 1-4 BELOW)	
	1		INSERT
	2		FITTING
	3		AIRLINE
	4		FITTING
C		WI E BRAKE OPTION (CAN ONLY BE USED IF GUN WAS ORIGINALLY ORDERED WITH WIRE BRAKE)	
	1	450-17	HOLDER TOOL
	2	495-18-35	JUMP LINER FOR 0.045" AND SMALLER
		495-18-116	JUMP LINER FOR 0.052" - 1/16"
	3	499	PUSHING UNIT
	4	499-9-15	AIRLINE 15'
5	498	HOLDER FOR 0.045" AND SMALLER	
	498-116	HOLDER FOR 0.052" - 1/16"	
D		EURO CONNECTOR OPTIONS	
	1	425-11	HAND NUT
	2	677-1	ROBOTIC HANDLE ASSEMBLY
	3	425-20E	EURO-CONNECTOR BODY

5.0 – COMPLETE ASSEMBLY OPTIONS


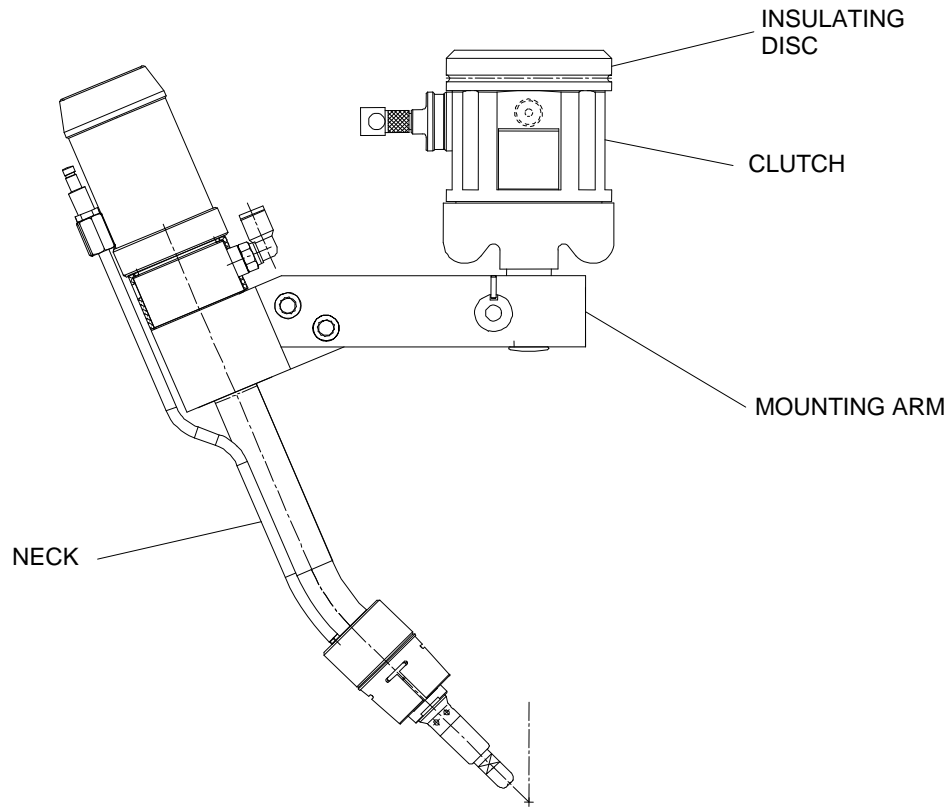


ITEM	PART #	DESCRIPTION
CLUTCH	AS-720	SAFETY CLUTCH
ARMS	AS-306-1	FOR 180° NECK
	AS-306-2	FOR 22° NECK
	AS-306-3	FOR 45° NECK
NECKS	590-22-XXXX	22° NECK
	590-45-XXXX	45° NECK
	590-180-XXXX	180° NECK
INSULATING DISCS	AS-101-01	BLANK
	AS-101-2	ABB® IRB-1400, IRB-1500, IRB-2000, IRB6, MILLER® MRV-2, MRV-10, FANUC®, ARCMATE 100, 120, 100i, 120i, MOTOMAN® SK6, OTC MRV-6, DR-4400
	AS-101-4	ABB® IRB-2400
	AS-101-5	OTC DR200
	AS-101-12	PANASONIC® W0500, ABB MAC500
	AS-102-5	KUKA®
	AS-102-6	HITACHI® PW-10
	AS-102-7	MILACRON® T3-776

ITEM	PART #	DESCRIPTION
INSULATING DISCS cont'd	AS-102-8	COMAU® SMART-3S
	AS-102-10	MOTOMAN® K6, K10 HITACHI® M6060
	AS-102-11	HITACHI® M5030, M6030
	AS-102-12	PANASONIC® AW - 500
	AS-103-3	FANUC ARCMATE® JR, SR
	AS-103-4	KUKA®
	AS-104-3	MILACRON®
	AS-105-1	MILLER® MRK-5
	AS-105-2	MILLER® MRH-2, MR-1000
	AS-106-1	MOTOMAN® L10W, L106 PANASONIC® AW7000
	AS-106-3	MITSUBISHI® MZ10
	AS-106-5	SAMSUNG® FARA AM1
	AS-106-6	PANASONIC® AW-005A, AW-010A NACHI® 7603
	AS-107-1	NACHI® VORG-35
	AS-107-2	NACHI® SC15
	AS-107-3	NACHI® SC 35-01
	AS-107-4	NACHI® 8633
	AS-107-9	PUMA® ALL
	AS-110-1	KAWASAKI® ALL

6.0 - WIRING DIAGRAM


500 AMP AC ROBOTIC TORCH WIRING DIAGRAM

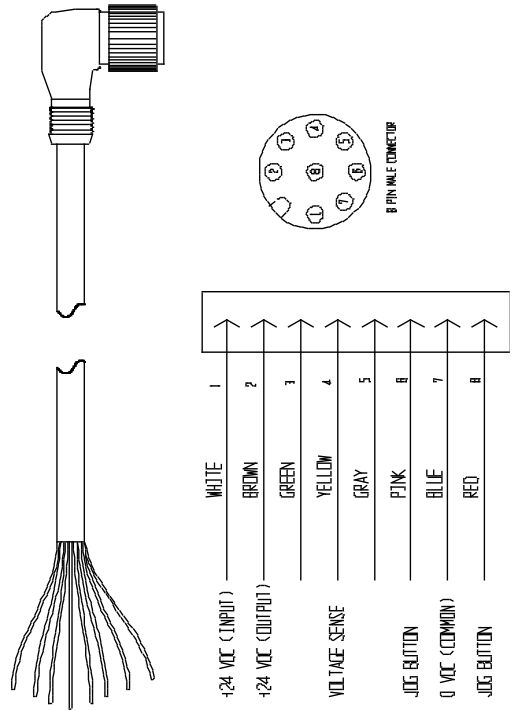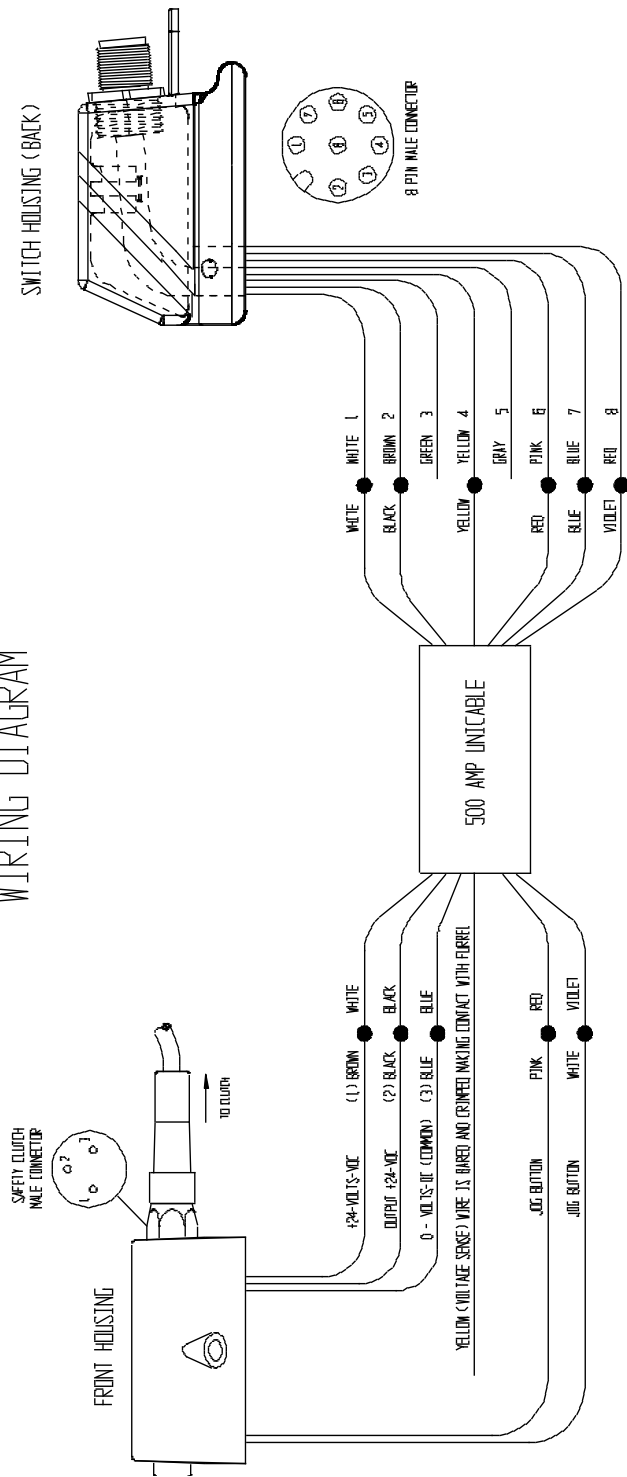

7.0 – TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE
POOR WIRE FEED	<ul style="list-style-type: none"> • CONDUIT LINER CLOGGED OR KINKED • INCORRECT LINER SIZE OR CONTACT TIP • LINER CUT TOO SHORT AND NOT SEATING PROPERLY IN GAS DIFFUSER • DRIVE ROLLS TOO TIGHT, RESULTING IN SCORING OF WELDING WIRE • WELDING WIRE DIRTY, RUSTY, OR TOO MUCH CAST
SHORT TIP LIFE	<ul style="list-style-type: none"> • DRIVE ROLLS TOO TIGHT, RESULTING IN SCORING OF WELDING WIRE • WELDING WIRE DIRTY, RUSTY, OR TOO MUCH CAST • UNCOATED WIRE BEING USED, INCREASING USAGE • WRONG WIRE SIZE • GUN BEING RUN BEYOND ITS AMPERAGE RANGE
GUN OVERHEATING	<ul style="list-style-type: none"> • LOOSE RETAINING SCREW ON QUICK CONNECT BLOCK • INSUFFICIENT GAUGE POWER CABLE AND/OR GROUND CABLE • LOOSE CONNECTOR CONES AND/OR CONE CUTS • GUN BEING RUN BEYOND ITS AMPERAGE RANGE • ELECTRICAL MALFUNCTION IN POWER SOURCE
JOG BUTTON MALFUNCTIONING	<ul style="list-style-type: none"> • BAD CONNECTION OF LEADS TO SWITCH TERMINALS • SPATTER BUILT UP BETWEEN BUTTON AND SWITCH HOUSING • CONTACTS DIRTY IN SWITCH • BROKEN OR WORN SWITCH LEAD
WELD POROSITY	<ul style="list-style-type: none"> • SPATTER BUILT UP IN NOZZLE, BLOCKING GAS • LEAKS IN GAS HOSE OR IMPROPER CONNECTION • O-RINGS ON POWER PIN ARE CUT OR DAMAGED • INNER TUBE LOOSE FROM CONNECTOR CONE • POOR WIRE FEED (SEE ABOVE) • IMPROPER SHIELDING GAS OR WELDING WIRE • RUSTY OR POOR QUALITY WELDING WIRE • GAS FLOW IMPROPERLY SET


8.0 – NECK INSPECTION SPECIFICATIONS

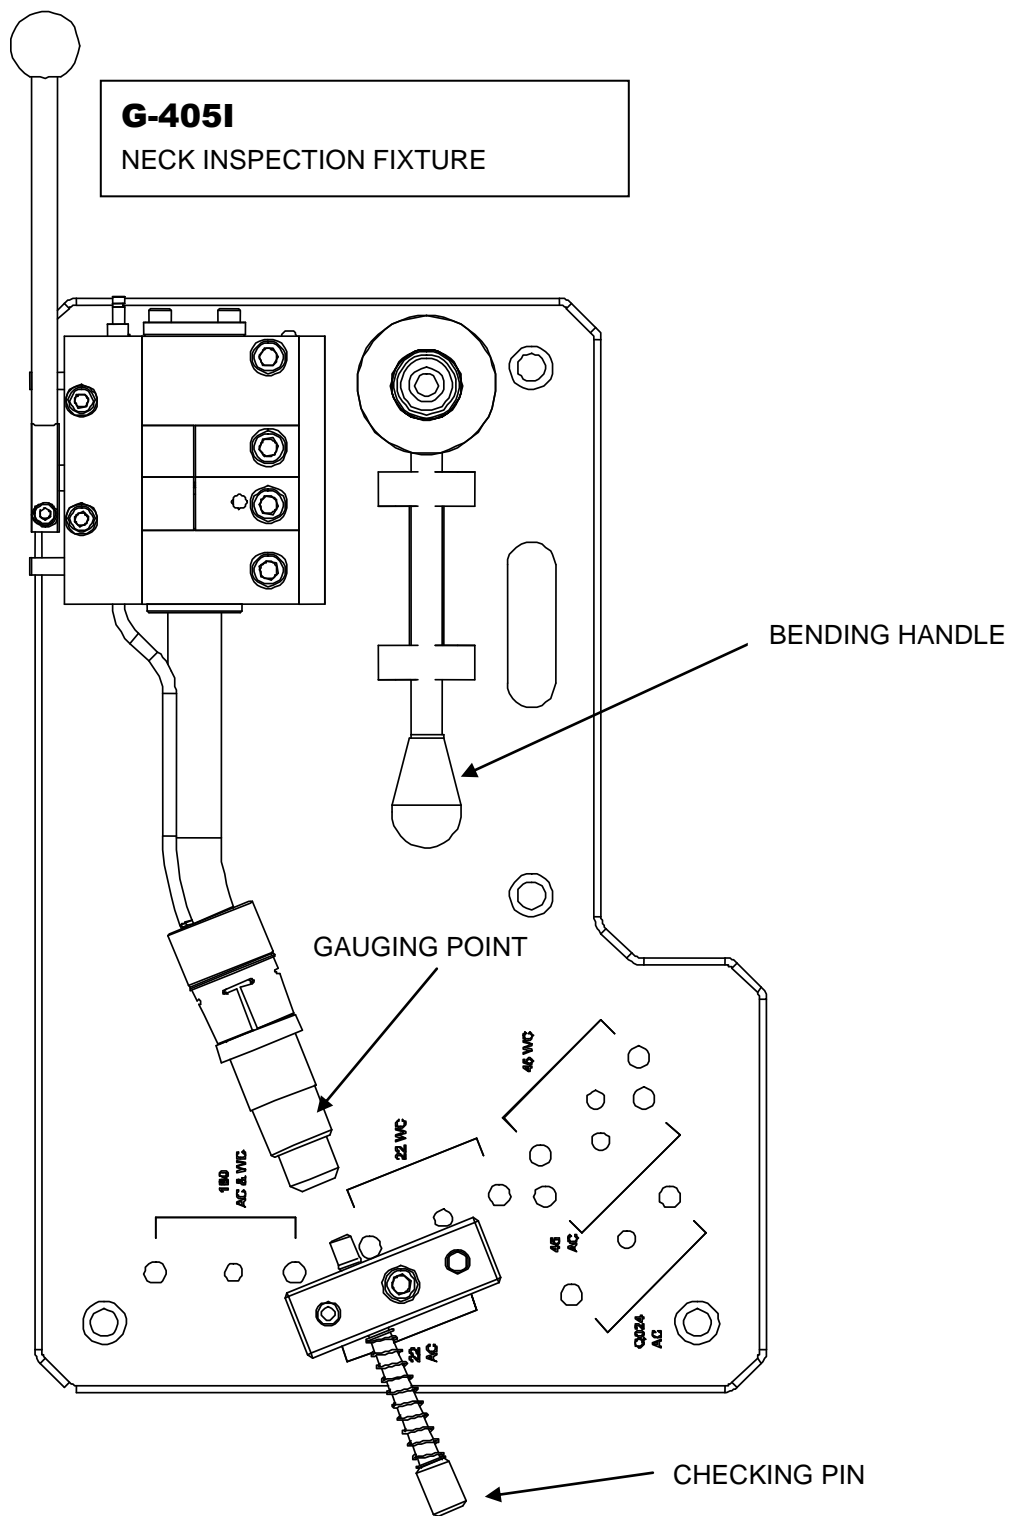

- Remove consumables from neck (nozzle, retaining head, etc.).
- Insert neck into fixture until it completely seats against shoulder.
- Push check pin towards neck and see if point lines up with small hole in end of gauging point.
- If neck is not aligned, slip the bending handle onto the gauging point and bend until alignment is correct.
- Remove gauging point and neck in reverse order as described above.
- Store parts for your fixture in the locations provided to prevent misplacing them.

9.0 – ORDERING INFORMATION

9.1 EXAMPLE OF STANDARD MODEL NO. AND OPTIONS

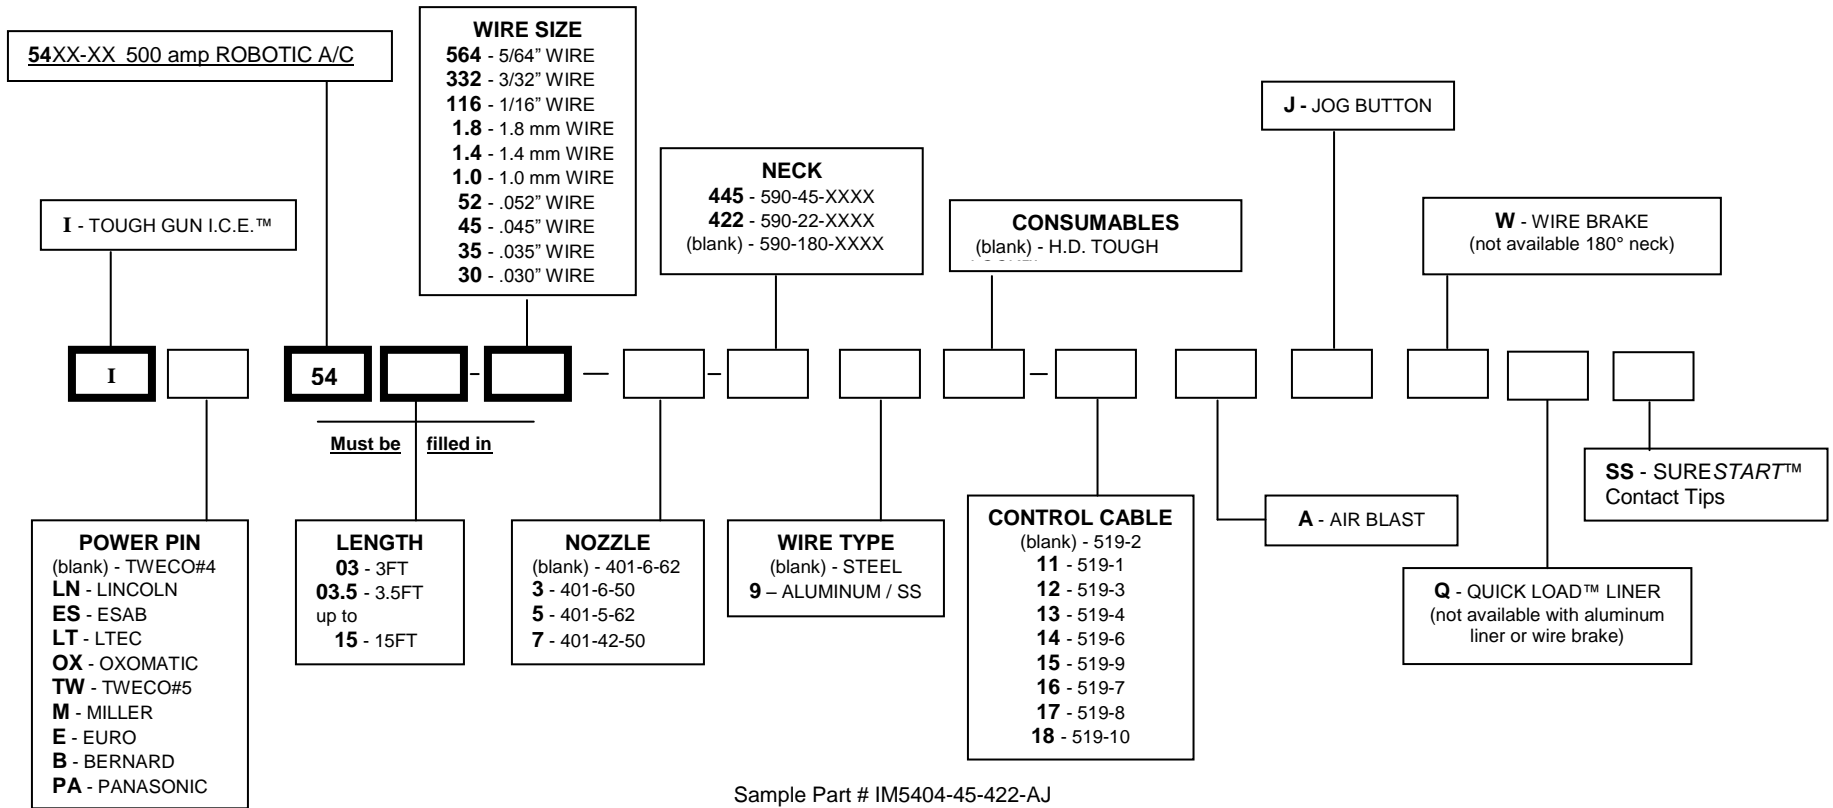

Sample Part # IM5404-45-422-AJ
 (TG ICE Robotic Torch, Miller Pin, 4 Ft., .045" Mild Steel Wire, 400 amp 22° Neck, Air Blast, Jog Button)



For Technical Support:
Canada & U.S.A. Phone: 1-877-737-3111
International Phone: +1-519-737-3000
Email: techservices@tregaskiss.com
www.tregaskiss.com

Distributed by:

05/11 REV D **M021**